

# PARTS LIST

for

# **KitchenAid®**

## **PRO LINE COFFEE GRINDER**

### **MODELS:**

KPCG100PM1 (Pearl Metallic)  
KPCG100NP1 (Nickel Pearl)  
KPCG100ER1 (Empire Red)  
KPCG100OB1 (Onyx Black)  
4KPCG100PM1 (Pearl Metallic)  
4KPCG100ER1 (Empire Red)



FOR CUSTOMER SATISFACTION ALWAYS USE  
FACTORY SPECIFICATION PARTS




KITCHENAID

ST. JOSEPH MICHIGAN 49085

# PEDESTAL JAR ASSEMBLY PARTS

For Models: KPCG100\_\_1, 4KPCG100\_\_1

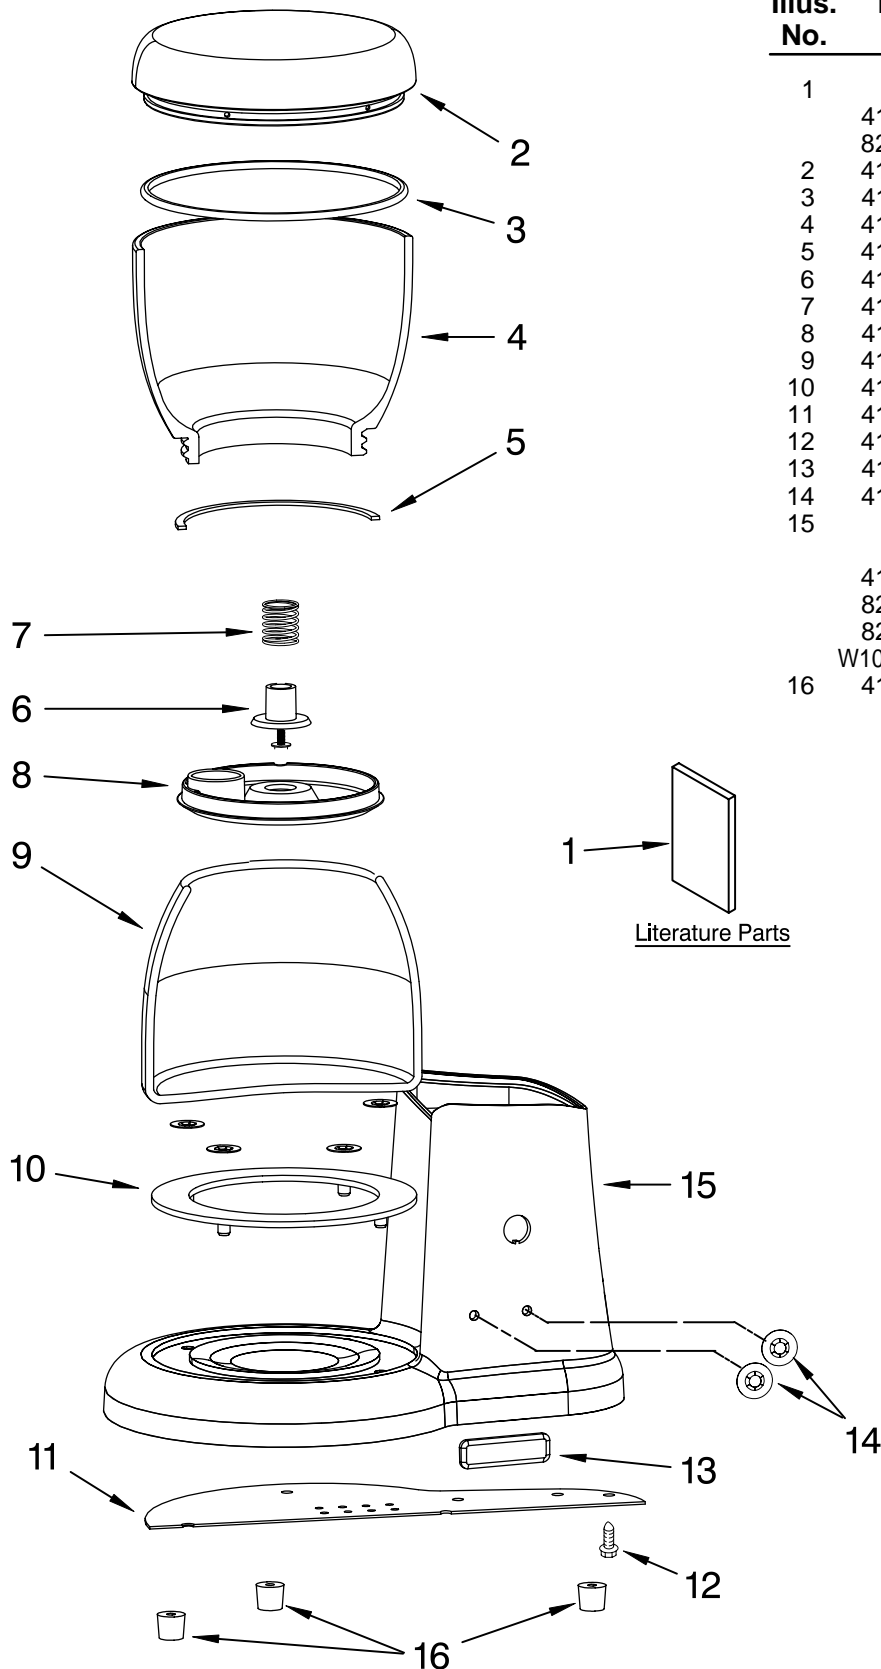


Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	4176735	Use and Care Guide
	8212130	Repair Parts List
2	4176717	Lid, Bean Jar
3	4176731	O-Ring, Lid
4	4176730	Jar, Bean
5	4176729	Seal, Bean Jar
6	4176723	Nozzle, Holder
7	4176715	Spring, Housing
8	4176721	Cover, Nozzle
9	4176728	Jar, Coffee Ground
10	4176722	Ring, Abrasion
11	4176703	Cover, Baseplate
12	4176760	Screw
13	4176701	Nameplate
14	4176713	Lockwasher
15		Base Assembly (Incl Nameplate)
	4176700	Pearl Metallic
	8212152	Nickel Pearl
	8212322	Empire Red
	W10217658	Onyx Black
16	4176725	Foot, Rubber

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# MOTOR HOUSING AND BURR ASSEMBLY PARTS

For Models: KPCG100\_\_1, 4KPCG100\_\_1

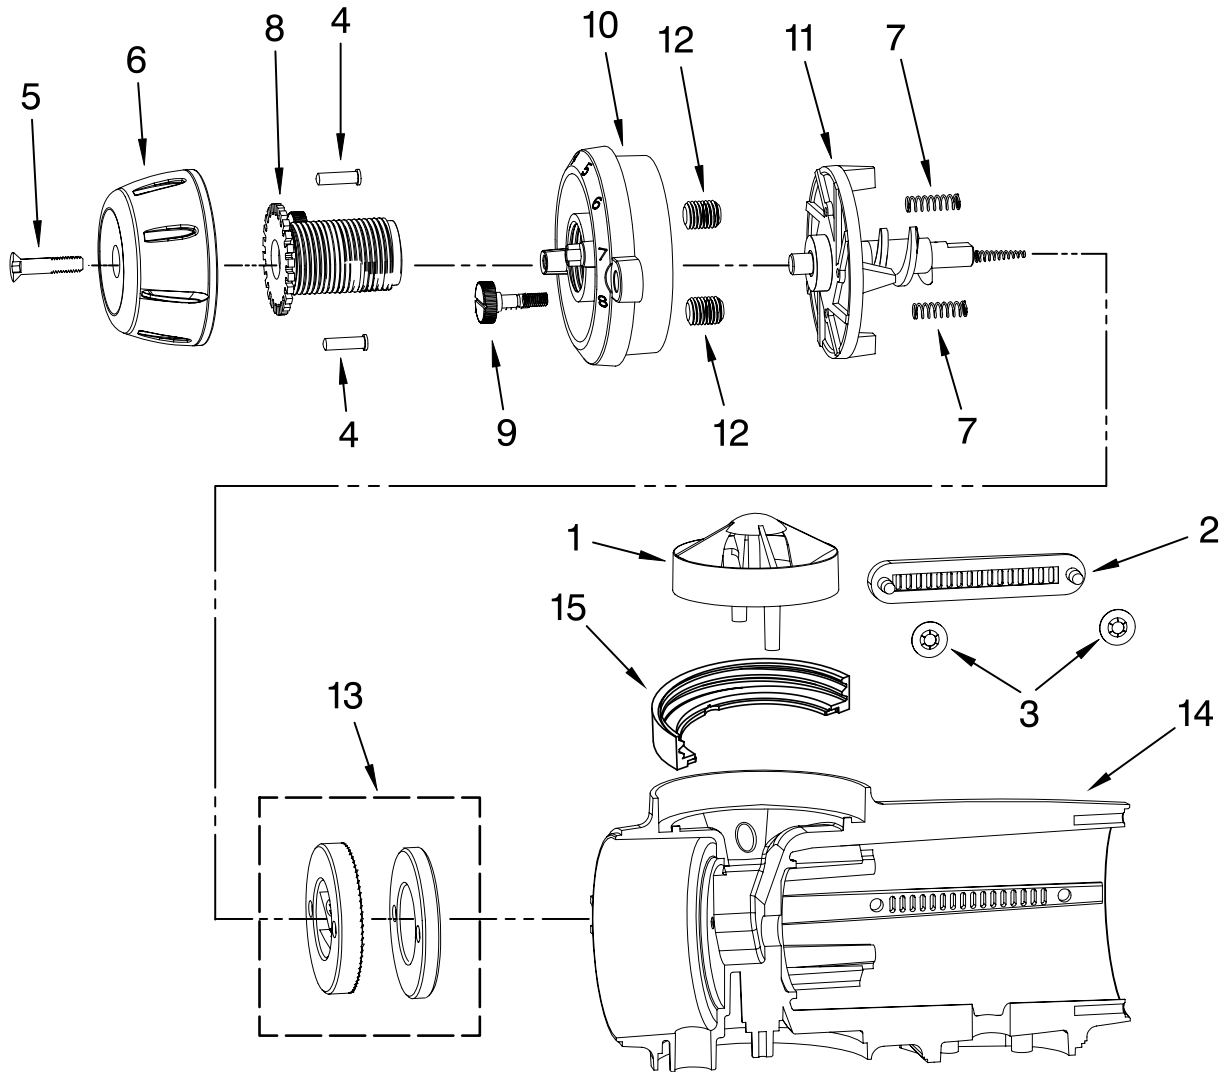


Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

1	4176695	Guard, Finger
2	4176696	Vent
3	4176713	Lockwasher
4	8212392	Pin, Detent
5	4176754	Bolt, Knob
6	4176718	Knob, Selector
7	8212394	Spring, Detent
8	4176716	Screw, Adjustment
9	4176705	Screw, Bezel
10	4176697	Bezel, Gearbox
11	4176694	Auger Assy.
12	4176712	Screw, Socket
13	4176702	Burr Assy.
14		Housing, Motor
	4176698	Pearl Metallic
	8212151	Nickel Pearl
	8212320	Empire Red
	W10217611	Onyx Black
15	W10223450	Insert, Thread Lock

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# MOTOR AND CONTROL PARTS

For Models: KPCG100\_\_1, 4KPCG100\_\_1

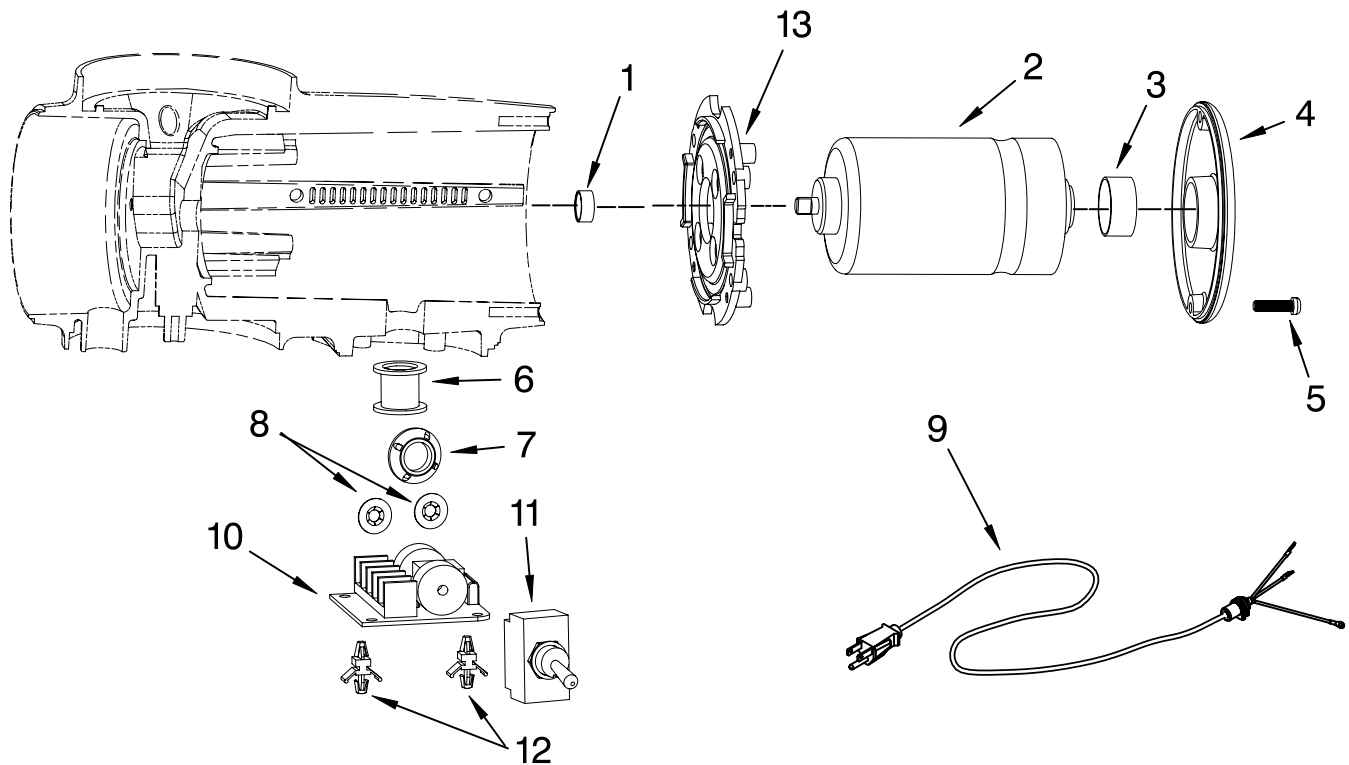

Illus. No.	Part No.	DESCRIPTION
1	4176707	Bushing, Copper
2	4176733	Motor
3	4176726	Seal, Vibration
4		Cap, Motor
	4176699	Pearl Metallic
	8212150	Nickel Pearl
	8212321	Empire Red
	W10217609	Onyx Black
5	4176755	Screw, Motor Cap
6	4176734	Tube, Housing
7	4176710	Nut, Switch
8	4176713	Lockwasher
9	4176757	Cord, Power
10	4176727	PCB Board
11	4176758	Switch, Toggle
12	4176724	Spacer
13	4176720	Plate, Motor

## OPTIONAL PARTS NOT ILLUSTRATED

4176764 Scoop, Coffee  
4176763 Brush, Cleaning

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST